Quick Setup for Windows XP SP2 system:

Connect the antenna with the TV dongle. Insert the CD into the CD-Rom drive of your computer.
The Auto run feature starts the installation of USB 2.0 DVB-T TV Dongle.

1. Insert the CD and it will auto start to install (if the picture below did not show up automatically, click the right button on the CD drive, then select “AutoPlay” to launch it).

2. Choice the language and click Next

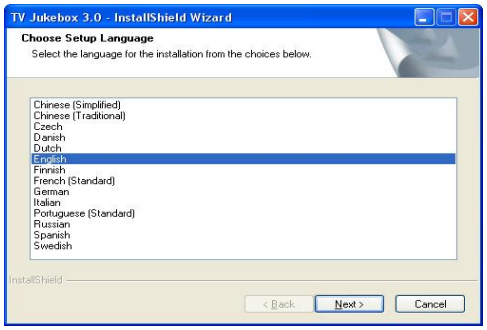

3. Click Next

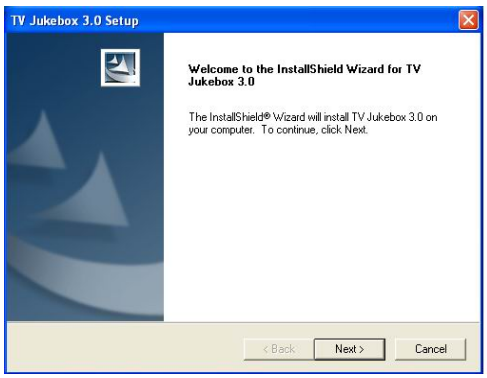
TV Jukebox 3.0 Setup
Welcome to the InstallShield Wizard for TV Jukebox 3.0
The InstallShield® Wizard will install TV Jukebox 3.0 on your computer. To continue, click Next.
< Back
Next >
Cancel

4. Click Yes

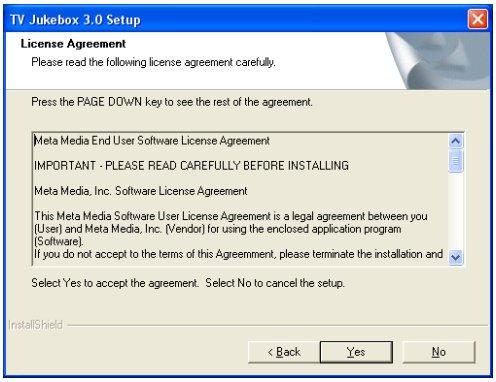
TV Jukebox 3.0 Setup
License Agreement
Please read the following license agreement carefully.
Press the PAGE DOWN key to see the rest of the agreement.
Meta Media End User Software License Agreement
IMPORTANT - PLEASE READ CAREFULLY BEFORE INSTALLING
Meta Media, Inc. Software License Agreement
This Meta Media Software User License Agreement is a legal agreement between you (User) and Meta Media, Inc. (Vendor) for using the enclosed application program (Software).
If you do not accept to the terms of this Agreemment, please terminate the installation and
Select Yes to accept the agreement. Select No to cancel the setup.
InstallShield
< Back
Yes
No

5. Input the User Name, Company Name and Serial Number.

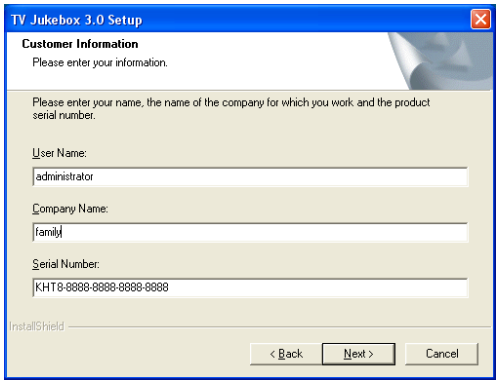

6. Click Next

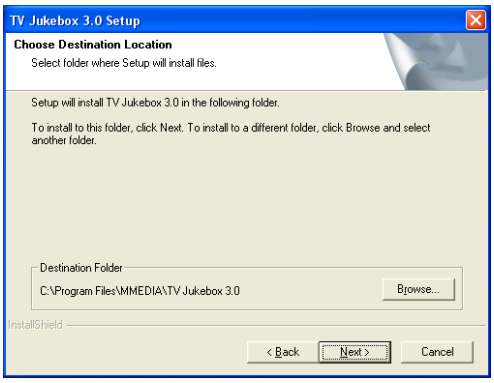
TV Jukebox 3.0 Setup
Choose Destination Location
Select folder where Setup will install files.
Setup will install TV Jukebox 3.0 in the following folder.
To install to this folder, click Next. To install to a different folder, click Browse and select another folder.
Destination Folder
C:\Program Files\MMEDIA\TV Jukebox 3.0
Browse...
InstallShield
< Back
Next >
Cancel

7. Click Next

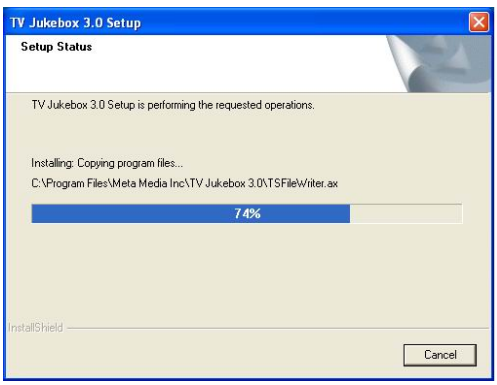

8. Click Finish

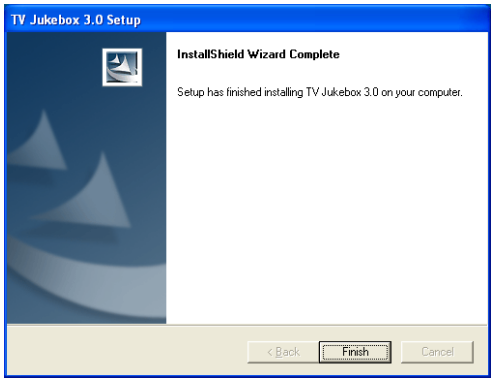

9. To continue the installation, Please connect your DVB-T to the USB port.

10. System found New Hardware, the device driver will be installed automatically.

11. Double click the TV Jukebox icon on the desktop

12. Click OK

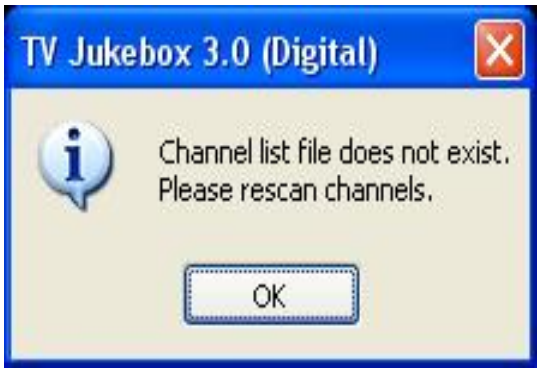

13. Select Region → Click Start Scan → Click OK.

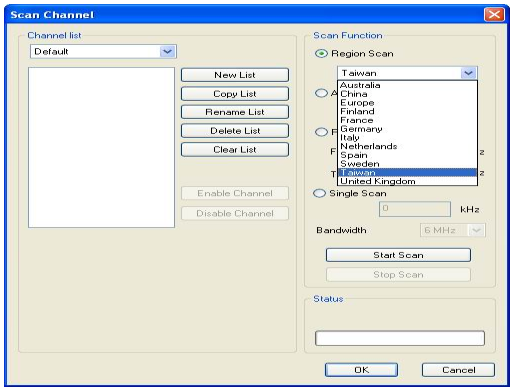

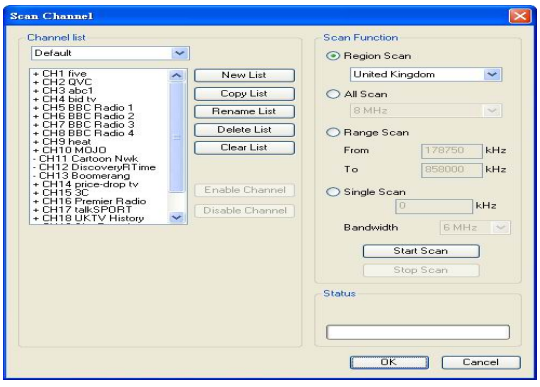

14. All Functions of Buttons on Control Panel

Icon	Function		
	Close program		Aufnahmefenster öffnen/schließen capture window
	Mute		Vorhergehende Seite
	Next audio stream		Folgende Seite
	Open help file		Löschen
	Switch to mini GUI		Zahlenblock öffnen/schließen
	Minimize the control panel		Zifferntasten
	Record		Lautstärkeregelung
	Stop recording, playing, time-shift		
	Play back video or photo		
	Pause		
	Time-shift		
	Fast forward		
	Rewind		
	Slider bar		
	Open/Close EPG window		
	Open schedule recording window		
	TV channel auto scan		
	Enter settings dialog box		
	Photo snapshot		
	Open channel list		
	Next channel		
	Previous channel		
	Return to the last channel		

15. REMOTE CONTROL KEYS FUNCTION

RETURN	Return to last channel	▲ VOL	Volume Up
TELE TEXT	Open/Close Teletext Window	VOL ▼	Volume Down
EPG	EPG Window	MUTE	Mute
POWER	Close Program	TIME SHIFT	Timeshift
FULL SCREEN	Switch to Full Screen	RECORD	Personal Video Recording
DUAL SOUND	Dual Sound Track	PLAY	Play
SNAP SHOT	Snapshot	STOP	Stop
SUB TITLE	Open/Close Subtitle	PAUSE	Pause
▲ CH	Previous Channel	0 9	Number Keys
CH ▼	Next Channel		

Remarks: For 2-digits channel exceeds 10, for instance 23,please press“2”followed by“3”.

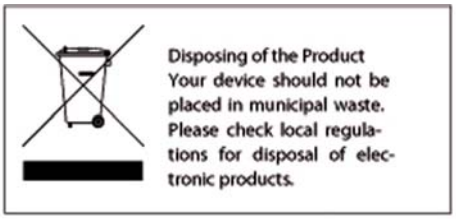
Disposing of the Product
Your device should not be placed in municipal waste. Please check local regulations for disposal of electronic products.